

# MAHLE




## CONNEX 2 Quick Start Guide



**BrainBee®**  
WORKSHOP SOLUTIONS

## TABLET CONFIGURATION

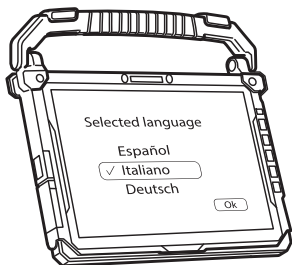

Connect the tablet to the mains using its power adapter, press and hold the green button for at least 3 seconds to power it up.

### 1. Select language




### 2. Select the chosen network, and connect the device by entering the password




If there is a Connex Link network, select **“I do not have an Internet connection”** and proceed with system initialisation. After the initialisation procedure, the instrument will automatically connect to the Connex Link network.

### 3. Accept the licence agreement

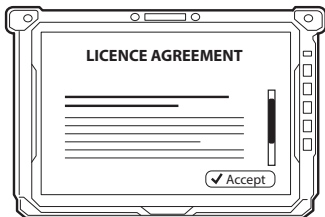


### 4. Enter the product configuration password

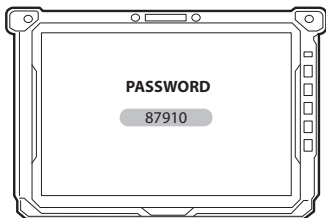


## SOFTWARE CONFIGURATION

Wait for the CONNEX 2 DS application to start.


1. Allow application to take pictures and record videos

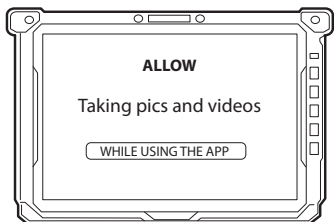


2. Allow application to access pictures and media

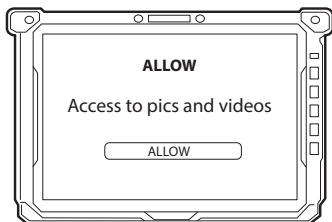

3. Allow application to search nearby devices

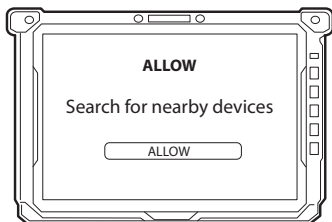


4. Allow application to access the device's location

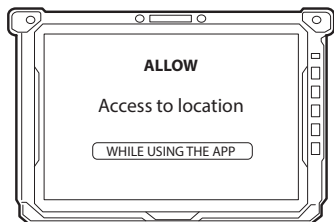


5. Connect VCI to vehicle or to tablet/pc. Select language




6. Select country of installation

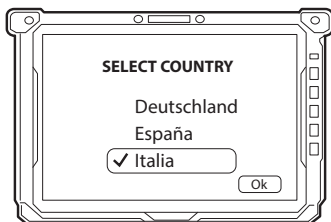

7. Check for updates

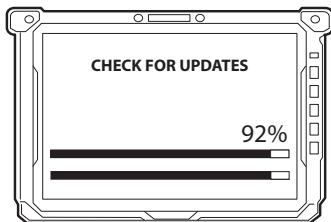

## 8. Start scan of BLE devices

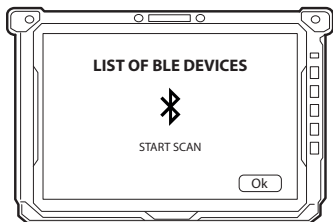

## 9. Check product activation licences



## 10. The device is now ready to be used on a vehicle.



Please refer to the CONNEX 2 manual for the actual use of the device.



In case of multiple devices, check the MAC address on the VCI nameplate.



This card is a “Quick Guide” and is not intended to replace an instruction manual. For further information or more detailed instructions, please refer to the user manual using the QR Code shown.



[www.brainbee.mahle.com](http://www.brainbee.mahle.com)  
[www.mpulse.mahle.com](http://www.mpulse.mahle.com)

This Quick Guide is available  
in additional languages: scan  
QR Code to download

